

JANOME BULLETIN

Quilt binder set

This attachment used with industrial sewing machines is now available with JANOME home-use sewing machines. The professional functionality and quick finish of the quilt binder set ensures that binding is no longer such a laborious task and will inspire a range of projects.

Compatible with the following models:
MC6500P / MC6600P
Horizon MC7700QCP
MC11000 / MC11000 Special Edition



Point 1 1/2" (15 mm) finished binding width

Producing a finished binding width of approximately 1/2" with enough room to handle quilt fabric and other thick fabrics. Not only does the attachment do straight line binding for large quilts, but it also adds wonderful, eye-catching accents to any small items such as placemats and hot pads.



Point 2 Finished binding widths of 5/16" (8 mm) and 7/16" (12 mm) also possible


The binder attachment plates (50mm/15mm) in the package and the 5/16" and 7/16" binder attachment plates sold with Janome's CoverPro machine can be used interchangeably to achieve another 2 binding widths.

32mm/8mm Tape binder Part No.: 795-824-014
42mm/12mm Tape binder Part No.: 795-842-007
(can be purchased separately)



Point 3 Professional fine-tuning for a beautiful finish

The two upper screws adjust the folds to allow you to set the position of the binding's top and bottom folds. Once you have set the position of the folds, place the attachment on the base and align the folded fabric with the needle to the desired position.

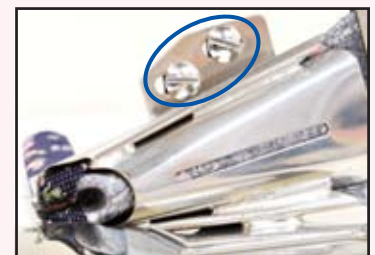

Top and bottom set at the same length. This is best for attaching binding with a straight stitch.



The bottom fold is set further forward than the top fold. This is suitable for blanket stitch.

JANOME BULLETIN

Quilt binder set

Point 4 Tips for a neat finish

1. Adjust the needle drop position as well as the screws to achieve stitching that is close to the inside edge of the binding.
 2. Sewing the folded binding at about 3/8" (1 cm) when beginning makes it easier to insert the edge of the quilt into the fold with the needle in the fabric (This is effective when sewing the binding from corner to corner).
 3. When using thicker fabric or making the double folded strip for the binding, cut the strips 1/8" (2 mm) narrower than the standard 2" (50 mm) to enable smooth insertion of the fabric into the attachment.
- * Sew with the two-prong AcuFeed or even feed foot for smooth feeding and to avoid wrinkling of the fabric even when working with different fabric thicknesses.



Placemat

How to mitre the corners:

1. Sew the horizontal binding from one side to the other and cut away all excess binding.
2. Leave the vertical binding 1" longer than the fabric at both ends.
3. Sew the vertical binding starting and finishing at 1/2" from the edges of the fabric.
4. Fold the ends of the vertical binding and finish with a straight stitch.

Quilt binder bag

Binding the edge of the fabric inside the bag, and on the handle and shoulder strip for a simple and easy finish.

